Short Operating Instruction

Betriebsmodi *DigiTouch*

Hand
- Aus
- Automatik
- Hand
- Befüllen

Hand

M1   FÜLL **+** REST

1 MAIS   FÜLL

5 GPS   6 CCM

8 RÜBEN   9 KART

1 MAIS   2 GRAS   3 MIST
4 GETR   5 GPS   6 CCN
7 SOBLU   8 RÜBEN   9 KART
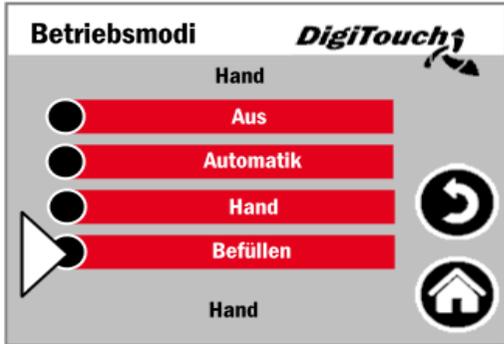
1. Filling the Container

on the touch display:
Choose mode of operation, choose filling

Choose substrates as needed:
Choose control, choose charge materials, choose e.g. maize (1), choose fill,
choose grass (2), choose fill etc.

with remote control:
Press button M1 (the remote control display shows "100")
Press rest + fill at the same time
The extern display shows the code „F° " in the front

Choose substrates as needed:
Choose charge materials , choose e. g. maize (1), choose fill, choose grass (2),
Choose fill etc.

with remote control 12-digit:
Press buttons [5 GPS] [6 CCM] at the same time

Switching to fill mode:
Press buttons [8 RÜBEN] [9 KART] at the same time
The extern display shows F
The substrates to be filled are registered in ascending order according to weight

Choose substrates as needed; e. g. maize (button 1),
Grass (button 2), etc.

2. Finishing filling process — Starting automatic operation

on the touch display:

Choose mode of operation, choose automatic operation

with remote control:

Press button M2 (the display of the remote control shows "900")

Press rest + fill at the same time

The external display shows the code "A" in the front

with remote control 12-digit:

Press buttons at the same time

3. Extra charge

on the touch display:

Press status, choose symbol , choose 1 charge

Press yes / no

4. Adjusting weight

on the touch display:

Change to fill mode (see point 1)

Choose status, choose symbol choose target KG,

Set weight and confirm with OK.

Switching back to automatic operation (see point 2)

Further possibilities:

Choose symbol Q choose fill, choose target KG,

Set weight and confirm with OK.

Switching back to automatic operation (see point 2)

5. Switching the extern display on / off — activating timer

Choose settings, choose basic settings, choose scales,

Choose extern display, choose timer (on / off 1 timer)

Emergency number: + 49 (0) 8631 307 - 242