



Quick Guide

Connecting the PC to the dosing unit

Preparation to enable remote access by a technician



Wir sind Fliegl.

  www.fliegl.com

The dosing unit can then be controlled via the PC.

Our technician can connect to the control system if required.


1. Connect Digitouch to the laptop or PC with a network cable




2. Install a Java-capable browser on the PC.
We recommend the Automation Browser from iniNet Solutions GmbH.
This can be downloaded from the following link:
<https://spidercontrol.net/download/downloadbereich/#automb>

The license can also be purchased on this page.

3. The browser can be started after installation.

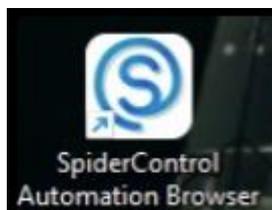

4. The connection to the dosing unit control can be established in the SpiderControl interface.

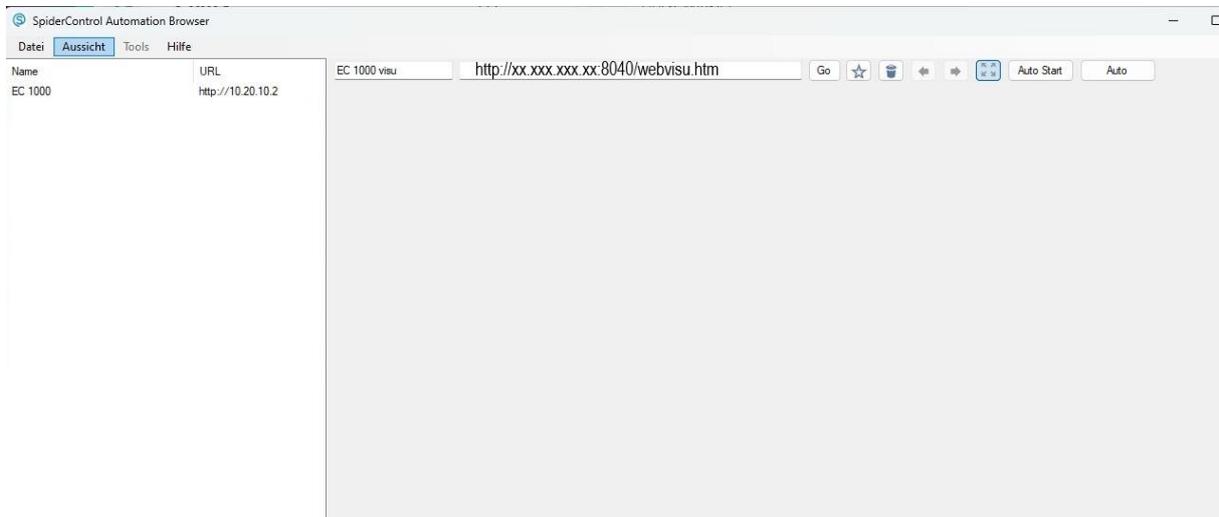

The information on which IP address you need can be found in the Digitouch. **(The standard IP address for the EC 1000 is: 10.20.10.2)**


It can be found under INFORMATION.

Main Menu -> Settings -> Other -> Diagnostics -> Information

Further information can also be found in our operating instructions Part B - Mask Overview.

<https://support.fliegl.com>

The screen of the control unit is then visible on the PC:

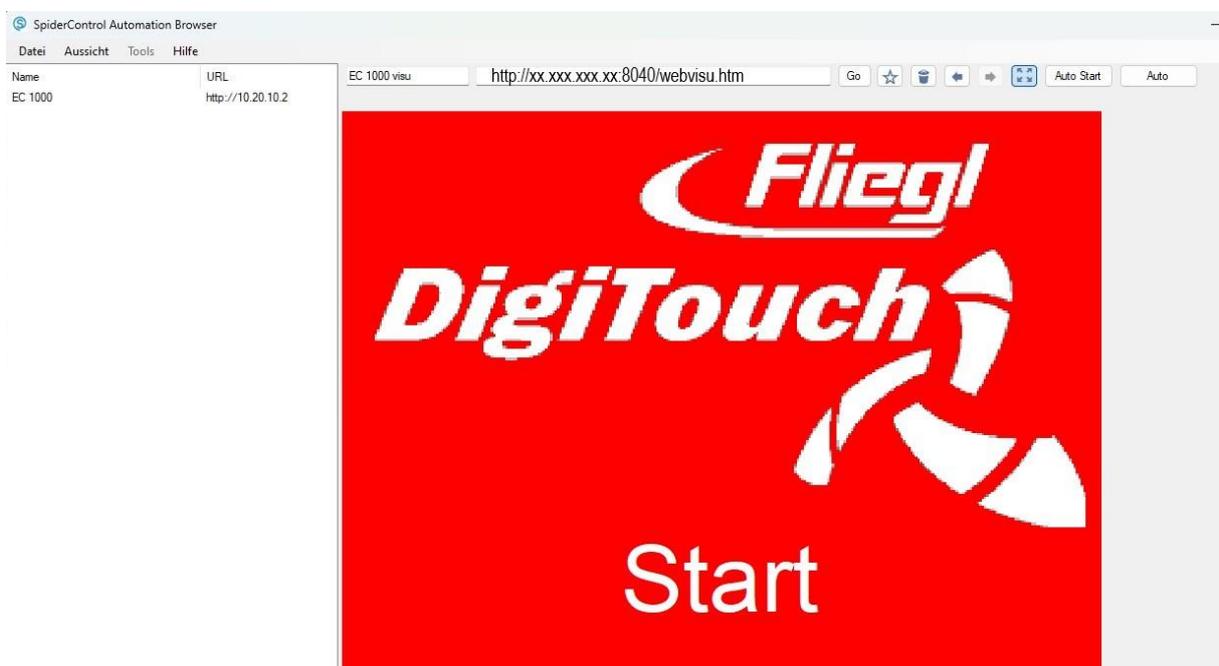


Provide remote access for a Fliegl technician:

5. The connection is established via TeamViewer.

If this is not yet installed, it can be downloaded from the following link:

<https://www.teamviewer.com/de/download/windows/>

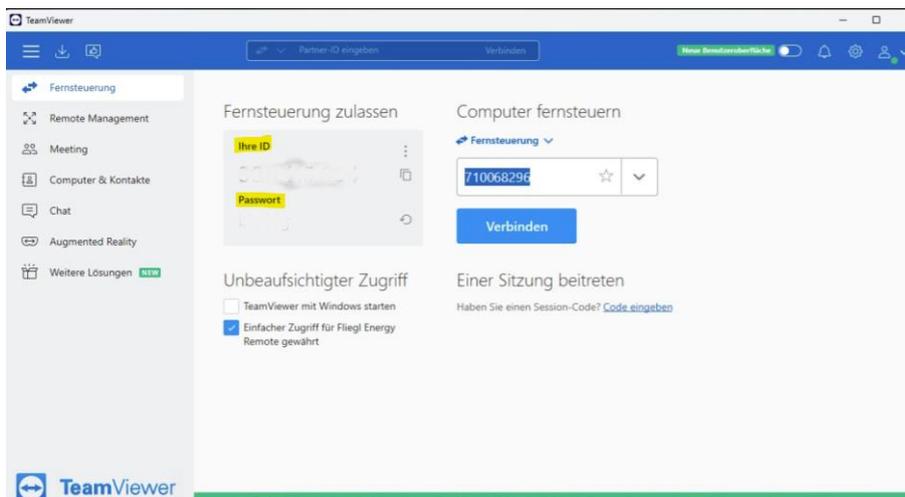

Our technician needs your ID and password to connect.

This is a contact card for Fliegl Dosiertechnik. It features the company logo at the top left, which consists of a stylized 'F' and the word 'Fliegl' in red, with 'DOSIERTECHNIK' in smaller letters below it. To the right of the logo, the contact details are listed: '► Fliegl Dosiertechnik', 'Bürgermeister-Boch-Str. 1', 'D-84453 Mühldorf a. Inn', 'Tel.: +49 (0) 86 31 307-0', 'Fax: +49 (0) 86 31 307-550', and 'e-Mail: info@fliegl.com'. At the bottom of the card, there is a green rounded rectangle containing the text 'Wir sind Fliegl.' in white. In the bottom right corner, there are social media icons for Instagram, Facebook, and Twitter, followed by the website address 'www.fliegl.com'.